


# Epson F160 Printing via Photoshop




## Photoshop Print Settings

The following is a guide for printing on the F160 using Photoshop. With your image ready to print open the print dialogue box which will look like below:

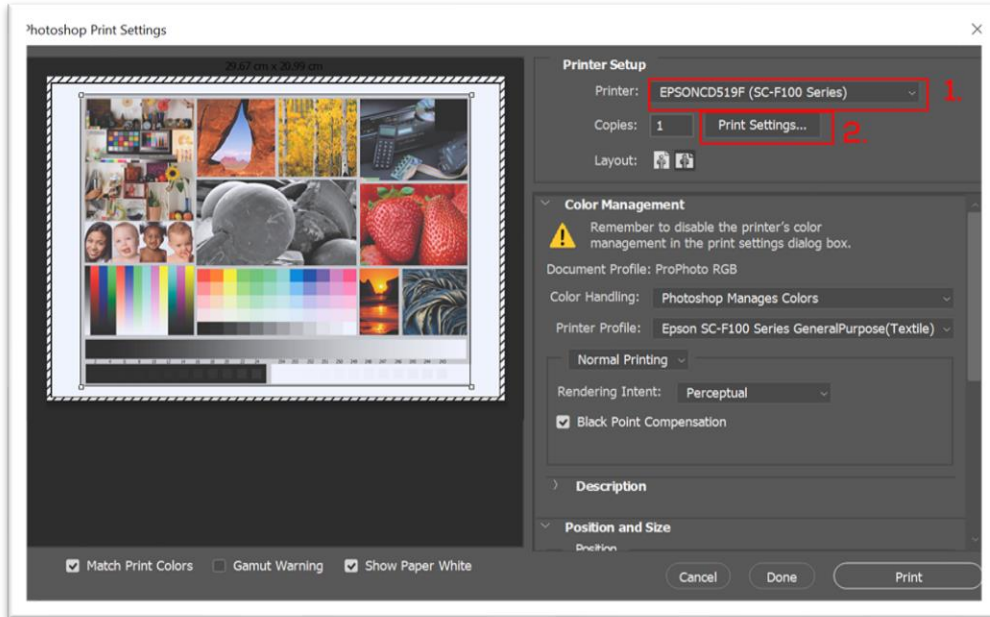


1. Select your printer.
2. Click Printer Settings which opens the following dialogue box.


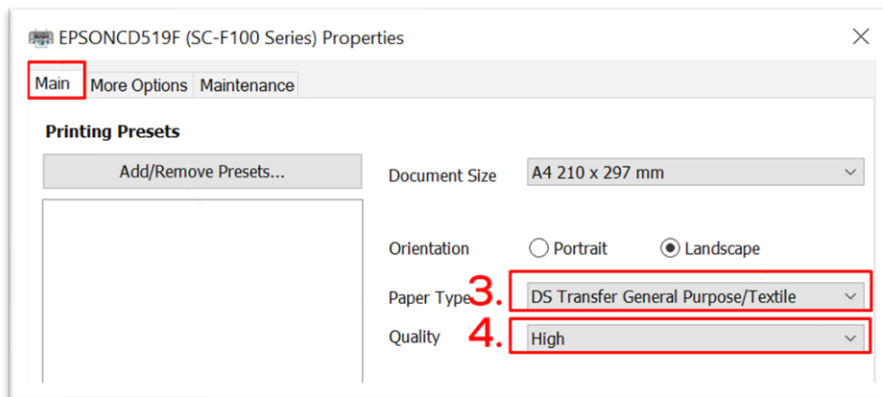


3. Select either Textile or Rigid depending on the product you are sublimating to.
4. I prefer running on the High setting but do your own testing to see results and make your own choice.

# Epson F160 Printing via Photoshop

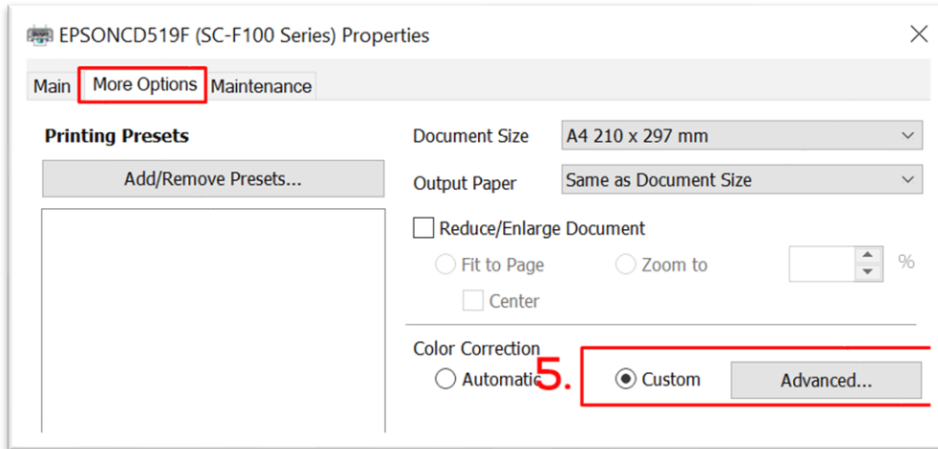

5. Under More Options Tab, click the Advanced Button.
6. Select No Colour Adjustment.

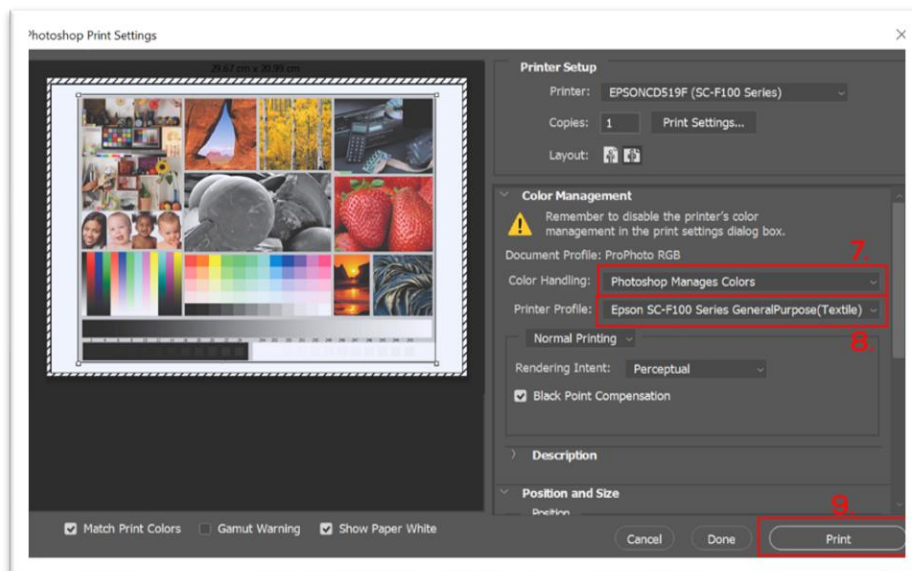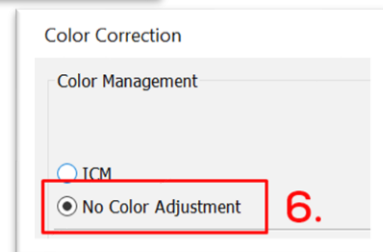

7. Select Photoshop Manages Colours.
8. Match this to what you selected in the previous setting to match what you are sublimating to.
9. Print it!

To browse our other Help Files, please head to Graphic Arts Supplies Help Centre <https://graphicartshelp.zendesk.com/hc/en-us>